


sectional drawing B-B


front view from water side

sectional drawing A-A

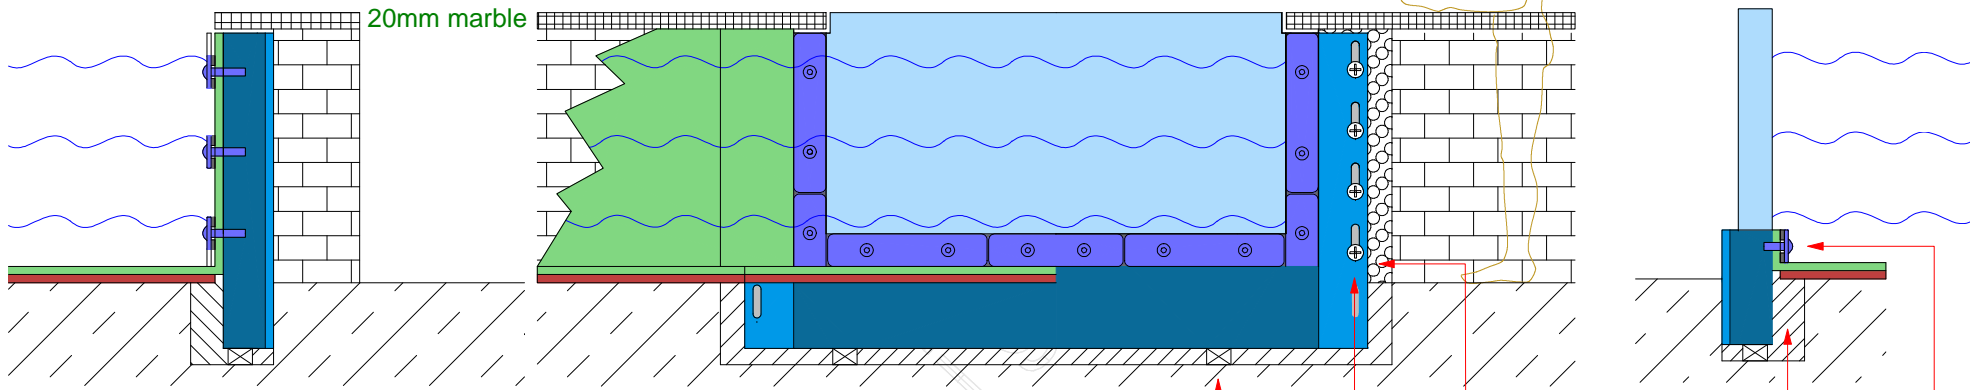

- Hydrosight Underwater Window
- Vinyl or PVC Swimming Pool Liner 1.5mm
- Fleece 2mm
- Concrete Floor
- Concrete Wall
- Mortar (non shrinking Grout)
- Stone, Tiles, etc.
- Styrofoam blocks, Polyurethane based Installation Foam

- quick window installation guide
- (1) adjust hight with setting blocks below window
 - (2) attach window on the left and right. use wall anchors
 - (3) fill sides of window with styrofoam
 - (4) cast bottom of window into groove in the floor. use non shrinking grout
 - (5) attach liner to pressure flange

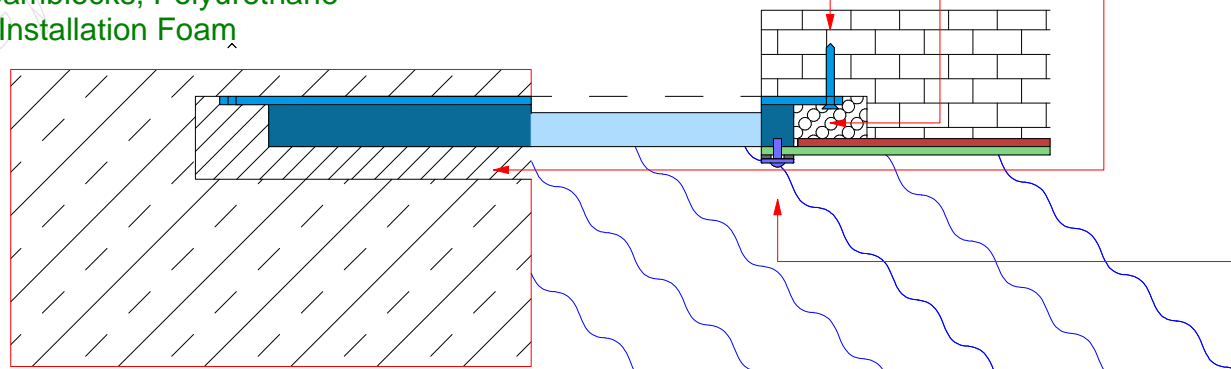

sectional drawing from the top / birds eye C-C and D-D

Hydrosight

Project: P3091
 Date: 30.01.17
 Author: K. Bora & M. Meinesz
 All dimensions in mm

Hydrosight - Lise-Meitner-Str.14
 46446 Emmerich - Germany
 Tel. +49 2822 60 250 900
 Email: io@hydrosight.com

(c) Hydrosight 2009. This calculation comes with absolutely no warranty, to the extent permitted by applicable law